


Ollin Monitor Arm.

User Guide

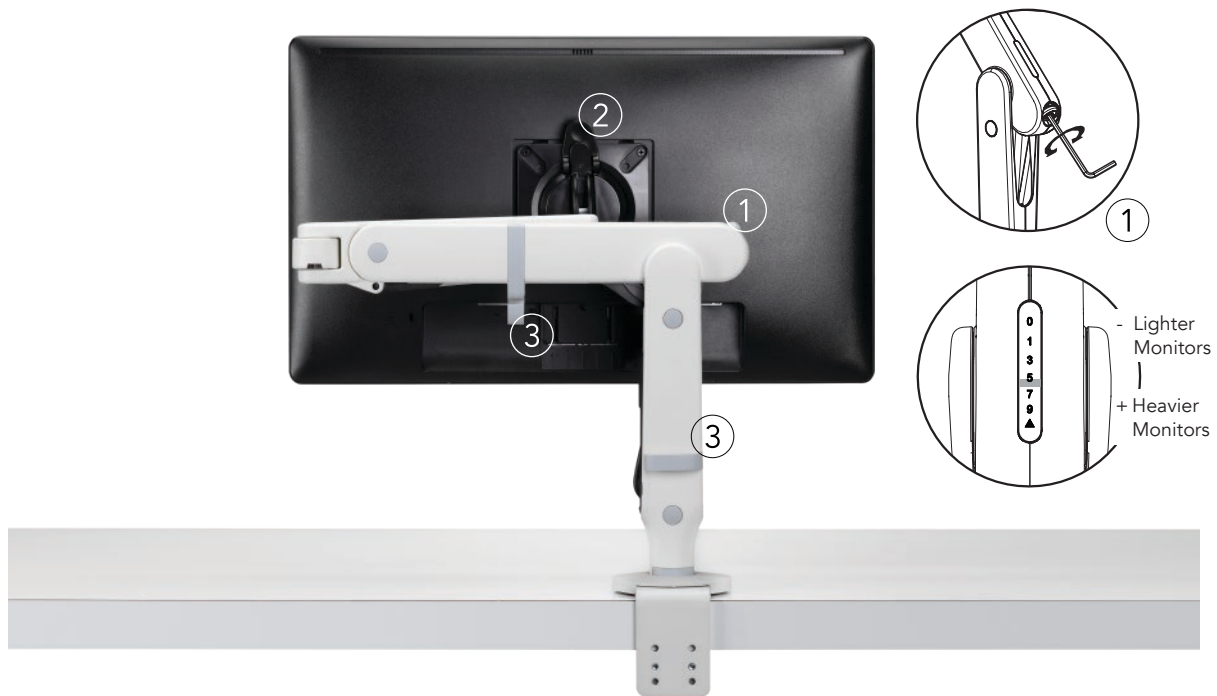

Ollin's smooth articulation and responsive movement gives users fingertip control of their screens. This ease of adjustment naturally invites better posture: because it's so easy to move the screen to exactly the right position, users do it without even noticing.

1. Arm Tension

Position the arm at its highest point, with a 4mm allen key turn the adjuster screw until the monitor 'floats' in all positions. Rotating the screw clockwise will increase load tension and anticlockwise will reduce load tension.

The arm setting indicator can be used to assist in installing multiple monitors by quickly 'dialing in' to the same setting, before making any further finer adjustments.

2. VESA Release

To remove the monitor press on the latch and lift the monitor up and off.

3. Cable Reticulation

Monitor cables can be tidied by tucking them into the cable clips on the upper and lower arm sections.